

# Spare Parts

## Spider Reel

Type SE-10, Type SE-10 DK

Type LE-17, Type LE-17 DK

	<u>SE 10</u>	<u>LE 17</u>	
1	12 249 7251	12 249 7051	Left hand housing (incl. pos. 2,7,11(6x),10,14,15) (LE incl. 13) incl. power switch
2	12 249 7251	12 249 7051	Right hand housing (incl. pos. 1,7,11(6x),10,14,15)
3	12 249 7252	12 249 7052	Reel inside including springs
4	12 249 7053	12 249 7053	Brass axle
5	not available	12 249 7054	Cable covers
6*	12 249 7255	12 249 7055	Cable assembly, 3x1.5mm <sup>2</sup>
	12 249 7057	12 249 7057	Plug Denmark
7**			Latch lever incl. spring and mounting washer (see pos. 1 and 2)
8	12 249 7258	12 249 7058	Top and bottom bolts (2 pcs.) (incl. 10,11,12,14,15 and 16)
9	12 249 7206	12 249 7006	Hose reel holder (incl. pos. 8)
10	12 249 7258	12 249 7058	Corner cover (incl. pos. 8,11,12,14,15,16)
11	12 249 7258	12 249 7058	Assembling screws (6x) (incl. pos. 8,10,12,14,15 and 16)
12	12 249 7258	12 249 7058	Main nut and washer (incl. pos. 8,10,11,14,15 and 16)
13	not available	12 249 7051	Connection cable
14	12 249 7258	12 249 7058	Safety pin (incl. pos. 8,10,11,12,15 and 16)
15	12 249 7258	12 249 7058	Guide sleeve (2x) (incl. pos. 8,10,11,12,14 and 16)
16	12 249 7258	12 249 7058	Distance washer (incl. pos. 8,10,11,12,14 and 15)
17	12 249 7019	12 249 7019	Stop ball

\* including connections and stop ball

\*\* not sold separately

